EN

88102 - 88105 - 88107

PROSLAT

WALL INSTALLATION INSTRUCTIONS

PLEASE DO NOT TAKE THIS PRODUCT BACK TO THE STORE!
PLEASE CALL: 1-888-691-2944

INSTALLATION VIDEO

PROSLAT.COM/proslat-videos

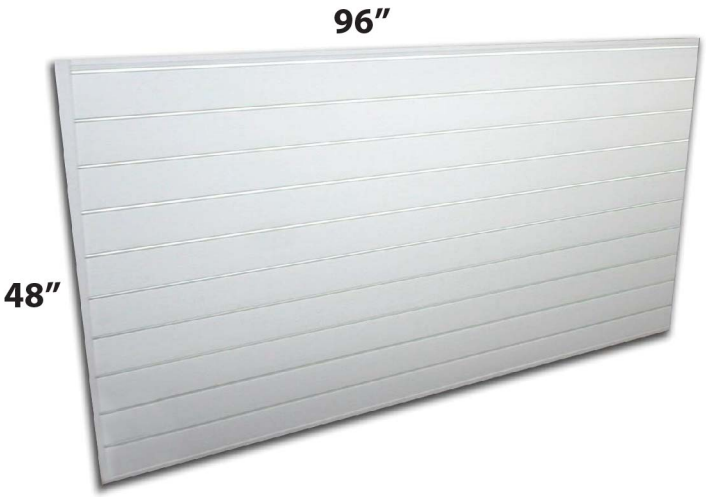

TOOLS NEEDED:

- DRILL
- LEVEL
- STUD FINDER
- SNIPS

Some kits include 2" screws.
See below for screw lengths.

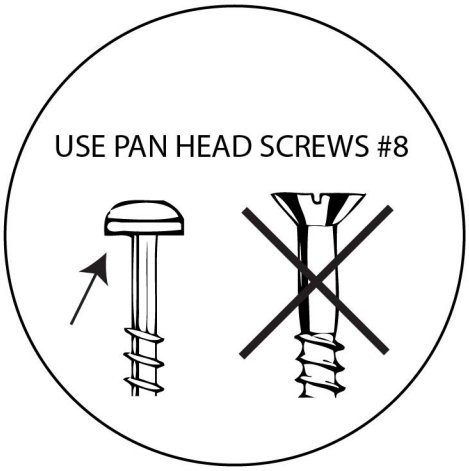

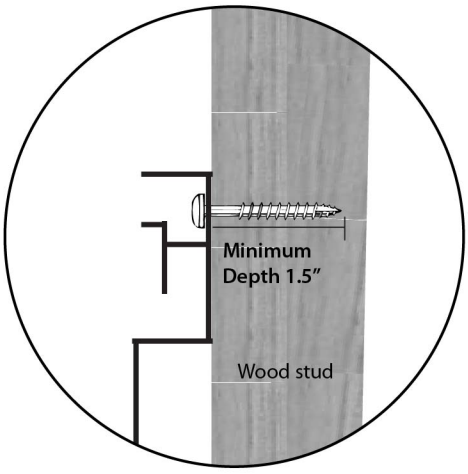

DIRECTLY ONTO STUDS
USE 1.5" OR 2" SCREWS

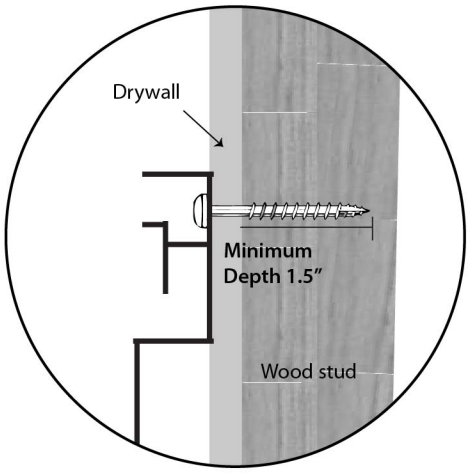

OVER DRYWALL
USE 2" SCREWS

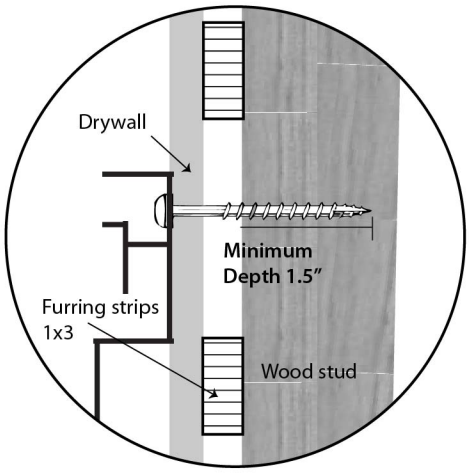

OVER DRYWALL AND STRAPPING
USE 2.5" SCREWS

295D Industriel Blvd, Châteauguay, QC, Canada, J6J 4Z2

EN

STEP 1 - INSTALLATION VIDEO

Watch our installation video for better understanding.

STEP 2 - LOCATION

Decide at what height and location you would like to install your Proslat. It is strongly recommended you start & finish on studs. 16" apart in order to support 75 lbs per square foot.

STEP 3 - FIND YOUR STUDS

Once you have choosen your location, verify that you are starting and finishing on a stud and locate all studs between starting and finishing.

STEP 4 - HORIZONTAL TRIM



Cut one of your J trims at 96" for the bottom horizontal trim.
If you are installing only one section high of panels, go to step **4A**.
If you are installing more than one section high (complete wall) go to step **4B**.

STEP 5 - VERTICAL TRIMS

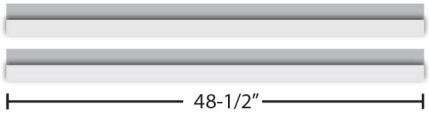

4A - (one section)
Cut one of your J trims into two pieces of 48-1/2".

4B - (complete wall)
Open your second box and retrieve one of the 97" J trims and cut each to 96".

STEP 6 - INSTALL HORIZONTAL TRIM

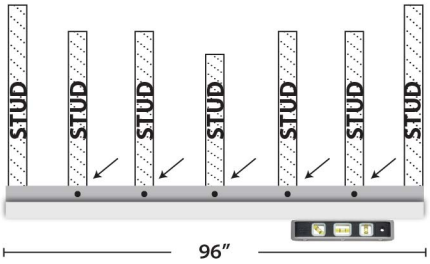

For this step, it is best to have 2 people. Install your bottom J trim at desired starting height, level and screw into the middle 5 studs. Do not screw into the first or last stud.

STEP 7 - INSTALL VERTICAL TRIMS

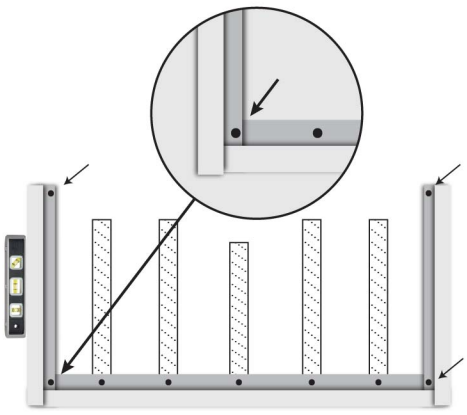

Overlap your vertical trim with your horizontal trim and screw through both. Level vertical trim and install one screw at the top. Repeat on other side. Your panels will be screwed through the J trim all the way up therefore holding it in place.

STEP 8 - INSTALL FIRST PANEL

To install the first panel, insert one end of your panel (left or right) into the vertical J trim and slightly curve the panel so it will insert into the other vertical J trim. Make sure your panel is inserted into bottom J trim. Screw through the upper cavity of the panel into each stud (16" apart). Screws at either end of the panel will screw through the J trim and into your stud. This will hold your J trims to the wall.

STEP 9 - INSTALL NEXT PANEL

Interlock one end of your next panel with the previous one, insert into one of your vertical J trims, curve your panel and insert into the other side. Make sure you screw all panels into every stud. Repeat until your section is done. Properly interlocked panels will conceal previous panel's installation screws.

STEP 10 - INSTALL TOP TRIM

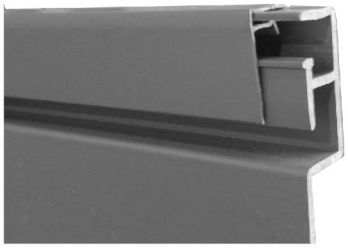

Install your top L trim by simply clipping it into the lip above screw cavity. If you have done a complete wall and you have had to cut your top panel to fit, you will need to use a little silicone to install.

CONCRETE OR BLOCKWALL INSTALLATION

If your walls are made of concrete or blocks, you will need to fasten 2"x3" stud or furring strips using a cement screw and then install your Proslat to the studs.

24" STUD CENTER

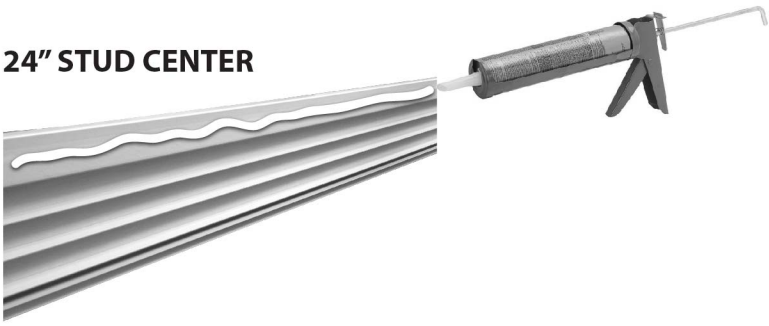

Our product is designed to hold 75 lbs per square foot when the studs are 16" apart. If your studs are wider apart please apply some adhesive to the back of the panel.

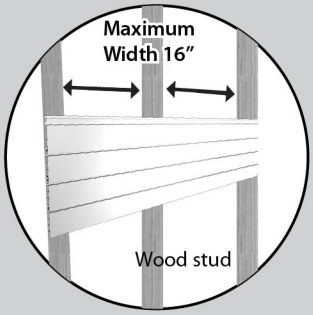

IN ORDER TO SUPPORT 75 LBS PER SQUARE FOOT. YOUR STUDS MUST BE A MAXIMUM OF 16" APART.

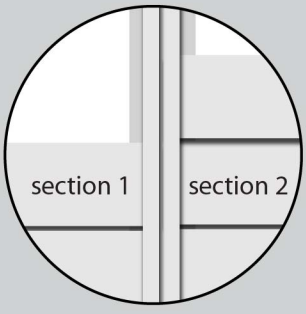

IF YOU ARE INSTALLING WIDER THAN 8 FT. OF PANELS, USE TWO J TRIMS BACK TO BACK TO HIDE THE JOINT.

YOUR BOX CONTAINS

10 panels
2 J trims (one for bottom, second for left & right sides)
1 L trim
Screws

PROSLAT WALL PANELS SUPPORT UP TO 75 LBS PER SQUARE FOOT